HOM-E-QUIP
STORAGE SYSTEMS

cabinette

MODEL 6602, 6603

ASSEMBLY INSTRUCTIONS

TIPS FOR INSTALLER

CHECK SHIPMENT: Immediately after receipt of shipment, check the condition and number of packages against the packing list and bill of lading. Any shortage or damage of packages should be noted on carrier's freight receipt. Any claim for loss or damage must be handled by the consignee, however, this company will provide any necessary assistance. Shortages or errors made by this company should be reported at once.

DISTRIBUTE MATERIALS: Check each part with parts list (page 2) as they are unpacked. Place parts in the approximate location where unit is to be assembled.

EDSAL Storage Cabinets are quality built and finished. Care should be used in handling to avoid damage.

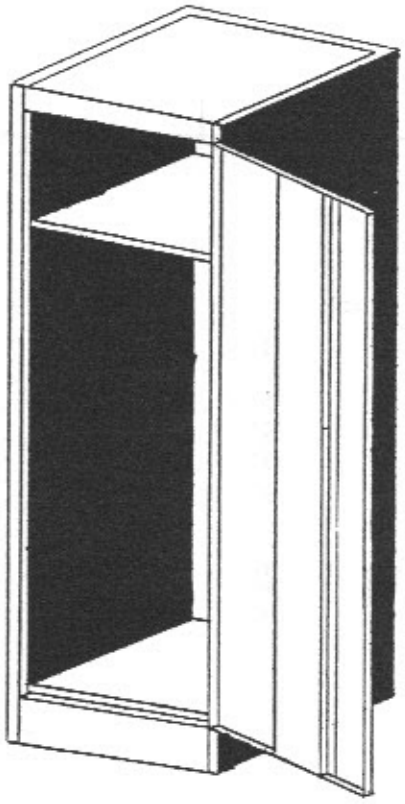

HOM-E-QUIP CONSUMER PRODUCTS DIVISION
EDSAL MFG. CO.
4400 S. Packers Ave. • Chicago, IL 60609

Parts for storage cabinets

BACK

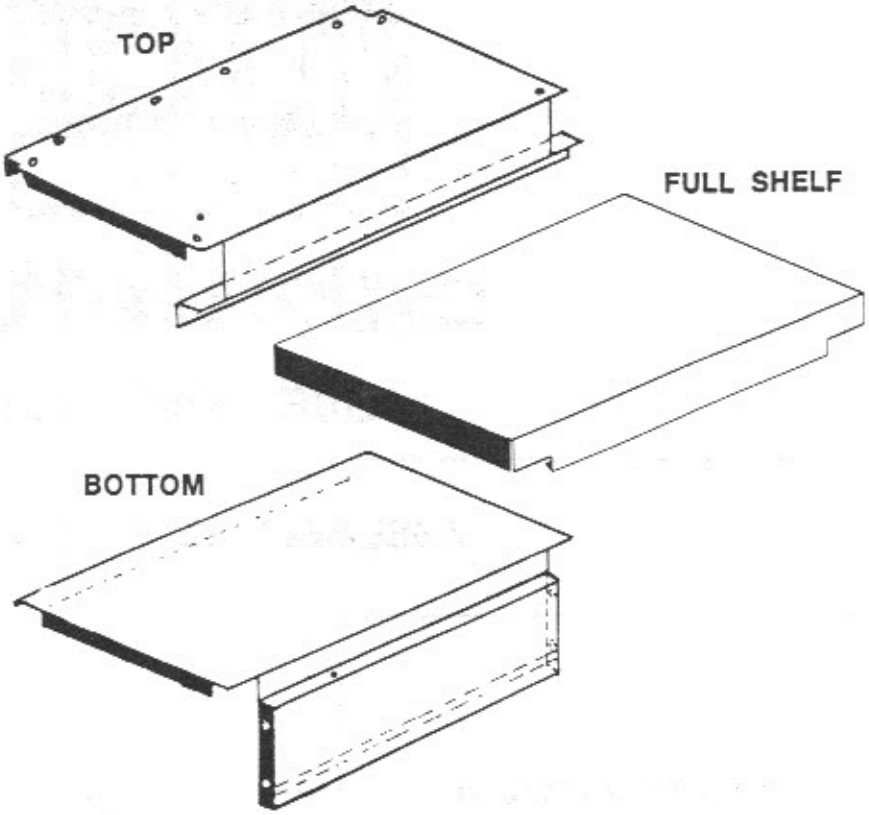

DOOR

CABINET END (Two (2) per cabinet)

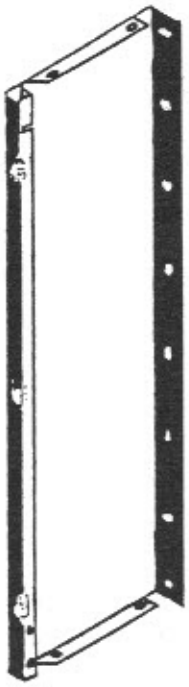

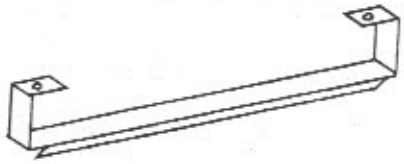

COAT HANGER
6603 ONLY

BOLTS & NUTS

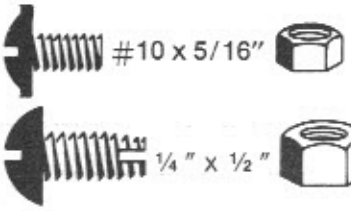

Assembly Instructions Model 6602, 6603

1. Place back panel on horse or other support for elevation.

2. The Top is now put into position **Under** top flange of back. Using #10x5/16" bolts, attach Top to Back by bolting through from flange side. (see figures B & C)

3. Next, bolt the right and left Cabinet Ends to Back edges and to the top. Use #10x5/16" bolts. Top flange of Cabinet Side should be over Cabinet Top. (see figure A & B)

4. Position Bottom flange of Top thru the slot located on the Cabinet Sides. (see figure B)

5. Position Cabinet Bottom between Front edges of Cabinet Ends at Lower End and Bolt with four ½" bolts. (see figure B & D)

6. Position Cabinet Bottom and attach to Back, with #10x5/16" bolts. (see figure B & C)

7. Hang Door to the Split-Hinges welded to the Side. (see figure A)

8. Unit may now be set upright. To install shelf first insert Shelf Brackets in the adjustment slots located in the front edges of the Cabinet Ends. Now insert rear corners of shelf in shelf adjustment slots located at either end of back. The front corners of Shelf rest on and are supported by the Shelf Brackets. (see figure C). Attach Coat Hanger to Shelf with 2 #10 Bolts and Nuts as shown in figure C.

9. Install Locking Handle on the door, following carefully instructions included in handle hardware package.

10. To insure that the door will operate properly, **PLACE THE CABINET IN ITS PROPER POSITION ON A LEVEL SURFACE. IF NECESSARY PLACE SHIMS UNDER THE CORNERS, WHERE REQUIRED, SO THE UNIT WILL BE LEVEL. CABINET MUST BE SECURED TO WALL OR FLOOR-FASTNERS NOT INCLUDED. WHEN LOADING STORE EVENLY ON ALL SHELVES.**

FIGURE A

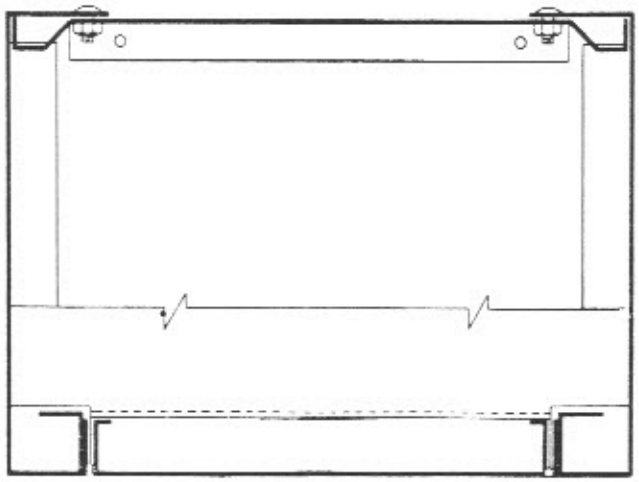

FIGURE B

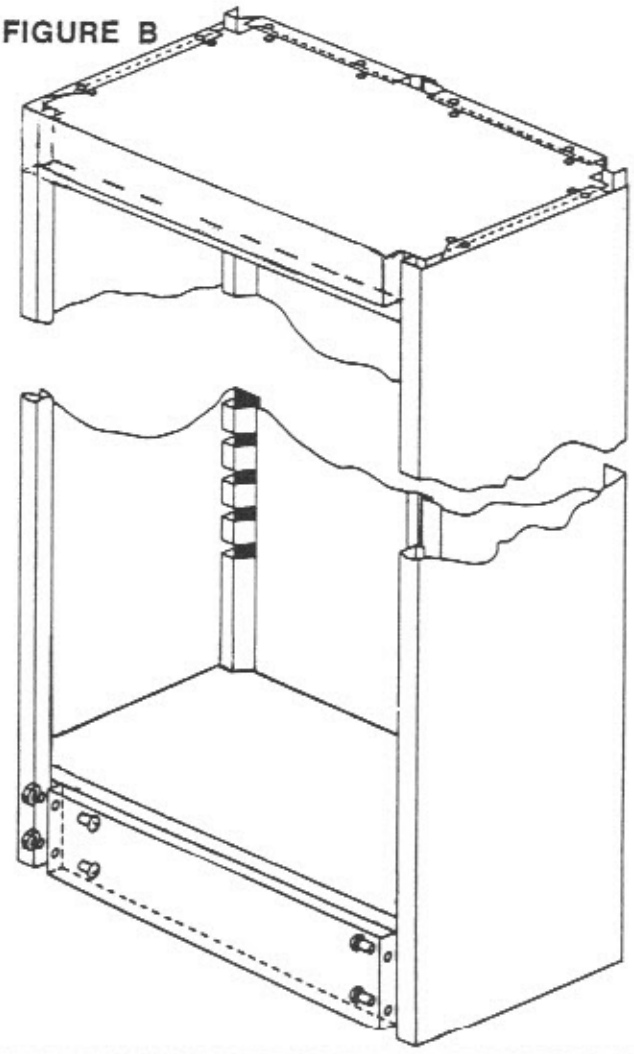

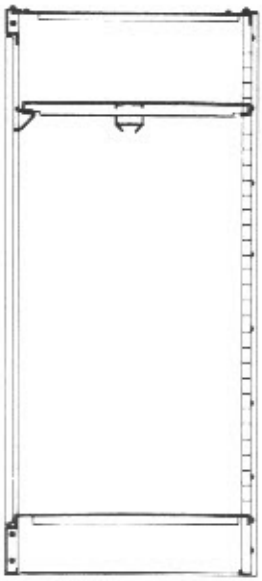

FIGURE C

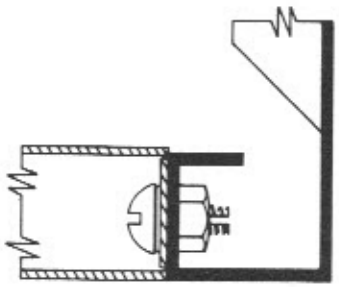

FIGURE D